



Quad Prime Camera Doorway Dolly (DL-QDPF-01)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Dolly



Handle



Steering Handle



Silver Rod



4 x Wheels



Seat



Handle Foam



2 x Side Boards



Euro



Seat Rod



Seat Arm



4 x CSK Bolts
(12 x 25mm)



T-Type Allen Key
(Size: 8mm)



L-Type Allen Key
(Size: 6mm)

Components Of Quad Prime Camera Doorway Dolly



INDEX

Sr. No	Particulars	Page No.
1	Pneumatic Wheels Assembly	5
2	Steering Handle Mounting	6
3	Extendable Rear Wheels	7
4	Handle Mounting	8
5	Silver Rod Mounting	8
6	Handles Foam Mounting	8
7	Handles Mounting	9
8	Side Boards Mounting	10
9	Euro Mounting	10
10	Seat Arm Mounting	11
11	Seat Rod Mounting	11
12	Seat Mounting	11-12
13	Seat Rotation	12-13
14	Bazooka Mounting	13
15	Height Riser Mounting	14
16	Fluid Head Mounting	14
17	Euro Mounting (Optional)	15
18	Final Setup	16

Quad Prime Camera Doorway Dolly Setup

Pneumatic Wheels Assembly

- Use a 4mm Allen key to loosen and remove the CSK bolt from the wheel axle.



- Attach the pneumatic wheel to the axle and re-insert the CSK bolt.

Feature: The 12-inch air-filled pneumatic wheels excel on sand and uneven terrain, ensuring smooth movement in any setting.



- Next, Tighten the bolt securely using the 4mm Allen key.
- The wheel is now properly attached.
- Repeat the same process to attach the remaining wheels.




Steering Handle Mounting

- Remove the locking pin from the rear wheel steering.
- Insert the steering handle into its designated slot.



- Reinsert the locking pin and ensure it is securely locked to hold the handle in place.
- The steering handle is now properly attached.

Feature: The steering bar tilts down 270° for added convenience for the dolly grip.

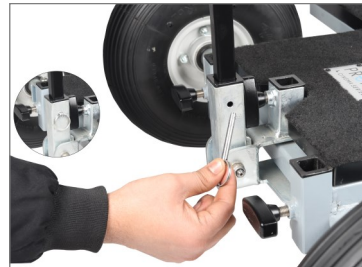

Steerable from Either End

90° Tilt Steering Bar for Dual-End Control




NOTE: The 90° tilt steering bar can be easily inserted into either end of the dolly, providing complete control over the front wheels' left-to-right movement for precise directional steering.



Extendable Rear Wheels

- Loosen the bottom knobs on both sides of the dolly and pull the rear wheels outward to extend them.
- once extended to the desired width, securely re-tighten the knobs.

Feature: The rear wheels can be extended outward by loosening a knob for enhanced stability.

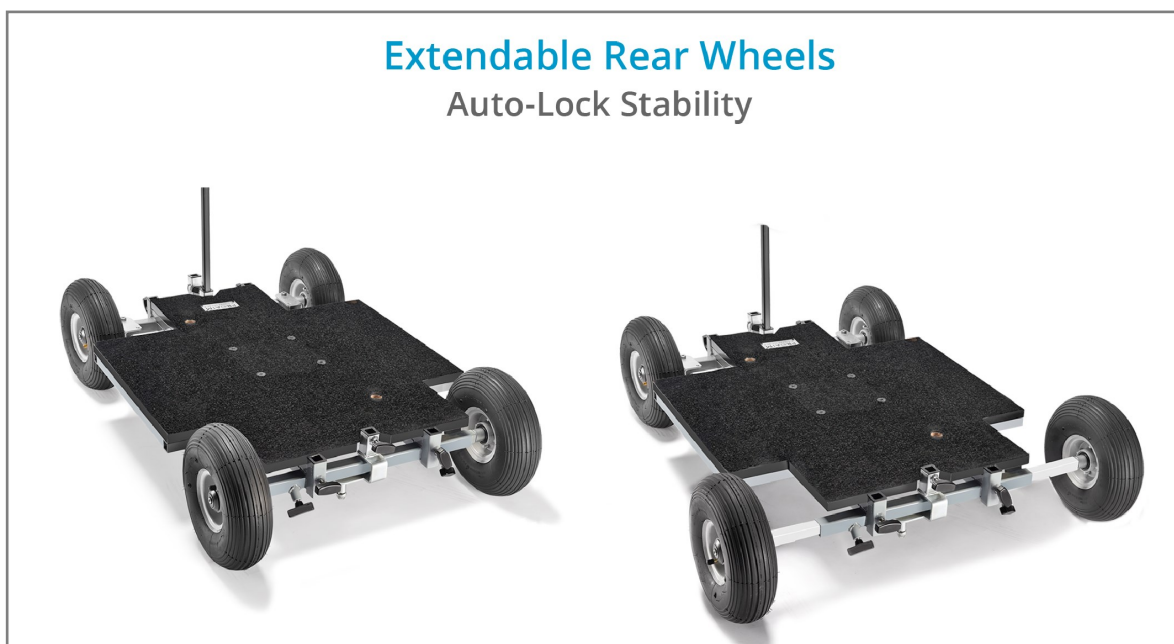

Handle Mounting

- Loosen The knobs on both handle slots located on each side of the dolly.
- Insert the handle into the designated slots.



- Once inserted, securely re-tighten the knobs to firmly lock the handle in place.



Silver Rod Mounting

- Loosen the knob of the handle and slide the silver rod into the designated holes on the handle.



- Once the rod is in position, securely re-tighten the knob to lock it in place.



Handles Foam Mounting

- Insert the foam grips onto both ends of the silver rod.
- Ensure they are securely fitted for a comfortable and firm grip.





Handles Mounting

- Loosen the knob from the rear wheel steering.
- Insert the steering handle into the adapter on the attached handle.



- Position the steering handle securely in place,
- Align the holes of the steering handle and knob, then re-insert and tighten the knob.



NOTE: Handles can be installed on either side of the dolly as needed.



Side Boards Mounting

- Insert the side boards into the designated slots on the dolly for extended platform space.

Feature: With included sideboards, you can expand the dolly's platform width by up to 16", offering increased space for additional crew, equipment, or wider tripod setups.



Extendable Wooden Platform Width

Up To 16" with Sideboards



Euro Mounting


- Place the Euro plate onto the dolly platform.
- Insert the Allen Bolts, aligning them with the holes on the plate.



- Tighten all bolts securely using a 6mm Allen Key.

- The Euro plate is now firmly mounted

Feature: The Euro/Elemac mounts onto the platform, allowing you to attach a variety of Elemac accessories.

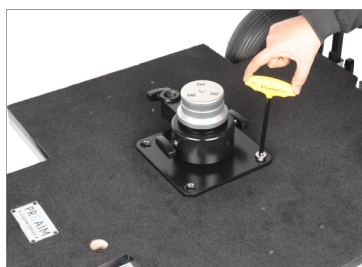

Seat Arm Mounting

- Loosen the knob of the Euro and insert the seat arm into the mounting slot.




- Once inserted, securely re-tighten the knob.



Seat Rod Mounting

- Insert the seat rod into the seat arm and secure it by inserting the locking pin.

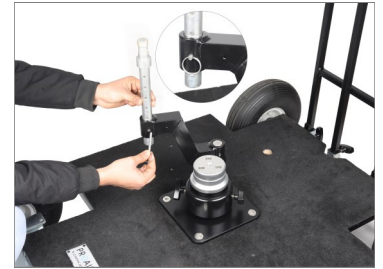

- The seat rod is securely inserted and locked in place.



Seat Mounting

- Loosen the knob on the seat and mount it onto the seat arm.



- Once the seat is in place, re-tighten the knob to secure it.



Seat Height Adjustment



Seat Rotation

- Loosen both knobs of the Euro mount to rotate the seat.



- Then Loosen the Euro knob near the seat arm mount for further adjustment.

Feature: The dolly includes a rotatable seat for added operator comfort during shooting.



Comfort For Operators

360° Rotable Seat



Bazooka Mounting

- Mount the Bazooka (Not included) onto the Euro and tighten the top knob on the lever inside the Bazooka.



- Secure the Bazooka in place by locking the lever.
- The Bazooka is now securely mounted on the dolly.



Height Riser Mounting

- Mount the Height Riser (**Not Included**) onto the bazooka.
- Secure the riser by tightening the ratchet knob firmly.



Fluid Head Mounting

- Mount the fluid head (**Not Included**) onto the height riser and secure it by inserting the locking knob from the bottom.





- Once the fluid head is securely mounted, slide the camera into position, as shown in the image.



Euro Mounting (Optional)

- Mount The Euro (Not Included) on the Dolly and insert the bolts (Not Included).
- Secure the mount by tightening the bolts using a 6mm Allen Key.
- Once mounted, you can conveniently attach a Bazooka (Not included) and a camera (Not Included) as needed.

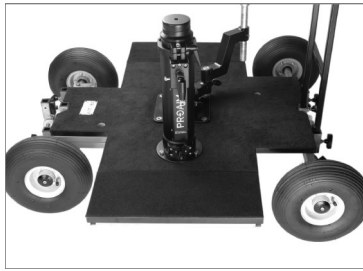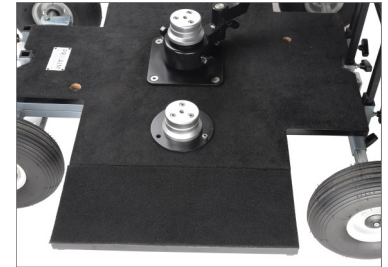

Wide Gear Compatibility Euro/Elemac Adapter

Optional Euro Mount



**YOUR PROAIM QUAD PRIME CAMERA DOORWAY DOLLY
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.